




Ensure that all the floor/wall connections are clean, dust-free and pre-primed

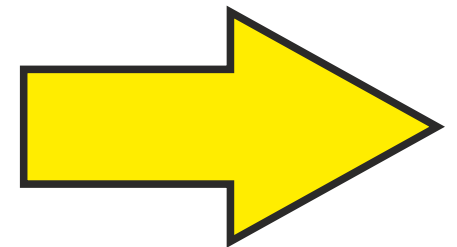


Unroll the underlay  
on the subfloor  
yellow side facing  
down.

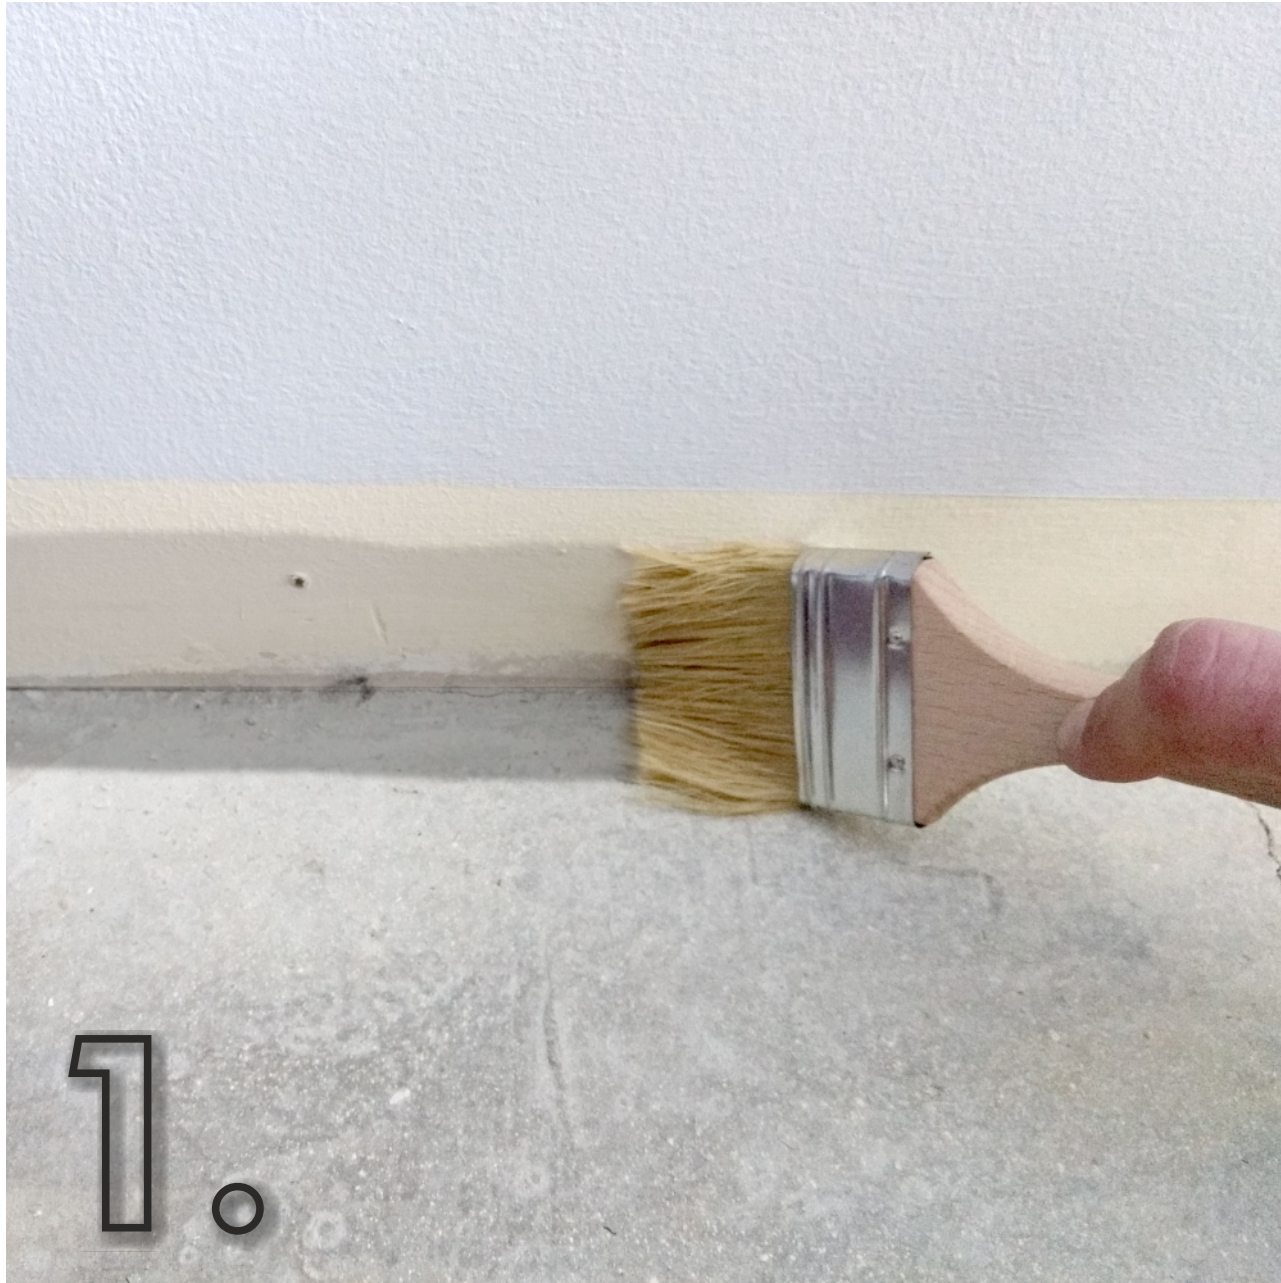

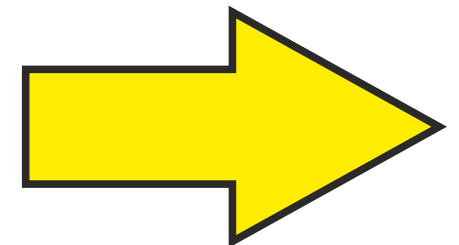


Seal parallell rows of underlay using overlap with butyl tape.

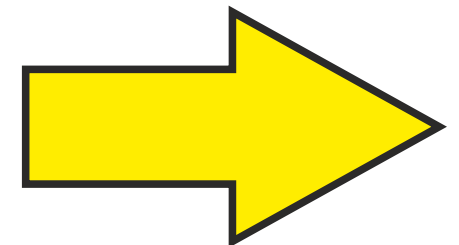





For sealing connections without an overlap (in the same row) use butyl/aluminium tape.

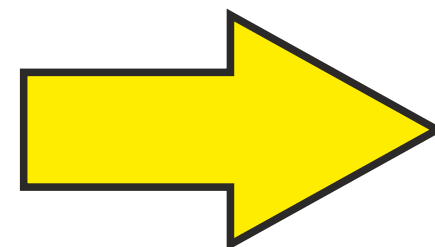




Make an overlap  
of minimum 3 cm  
outside both sides  
of the connection.

$\geq 3\text{cm}$


5.

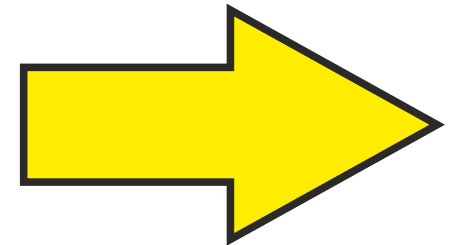







Seal the connections between parallel rows of underlay using aluminium sealing tape.

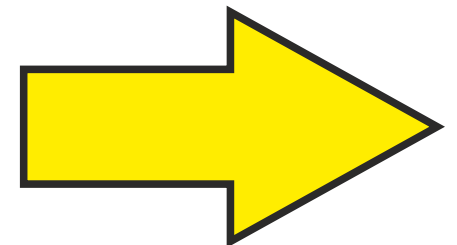




Seal all the edges  
of underlay running  
along walls with  
aluminium/butyl tape.

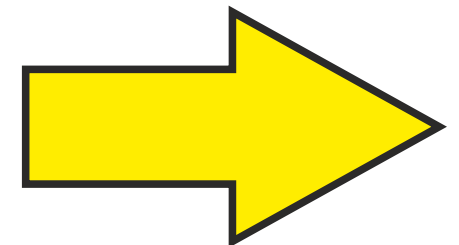

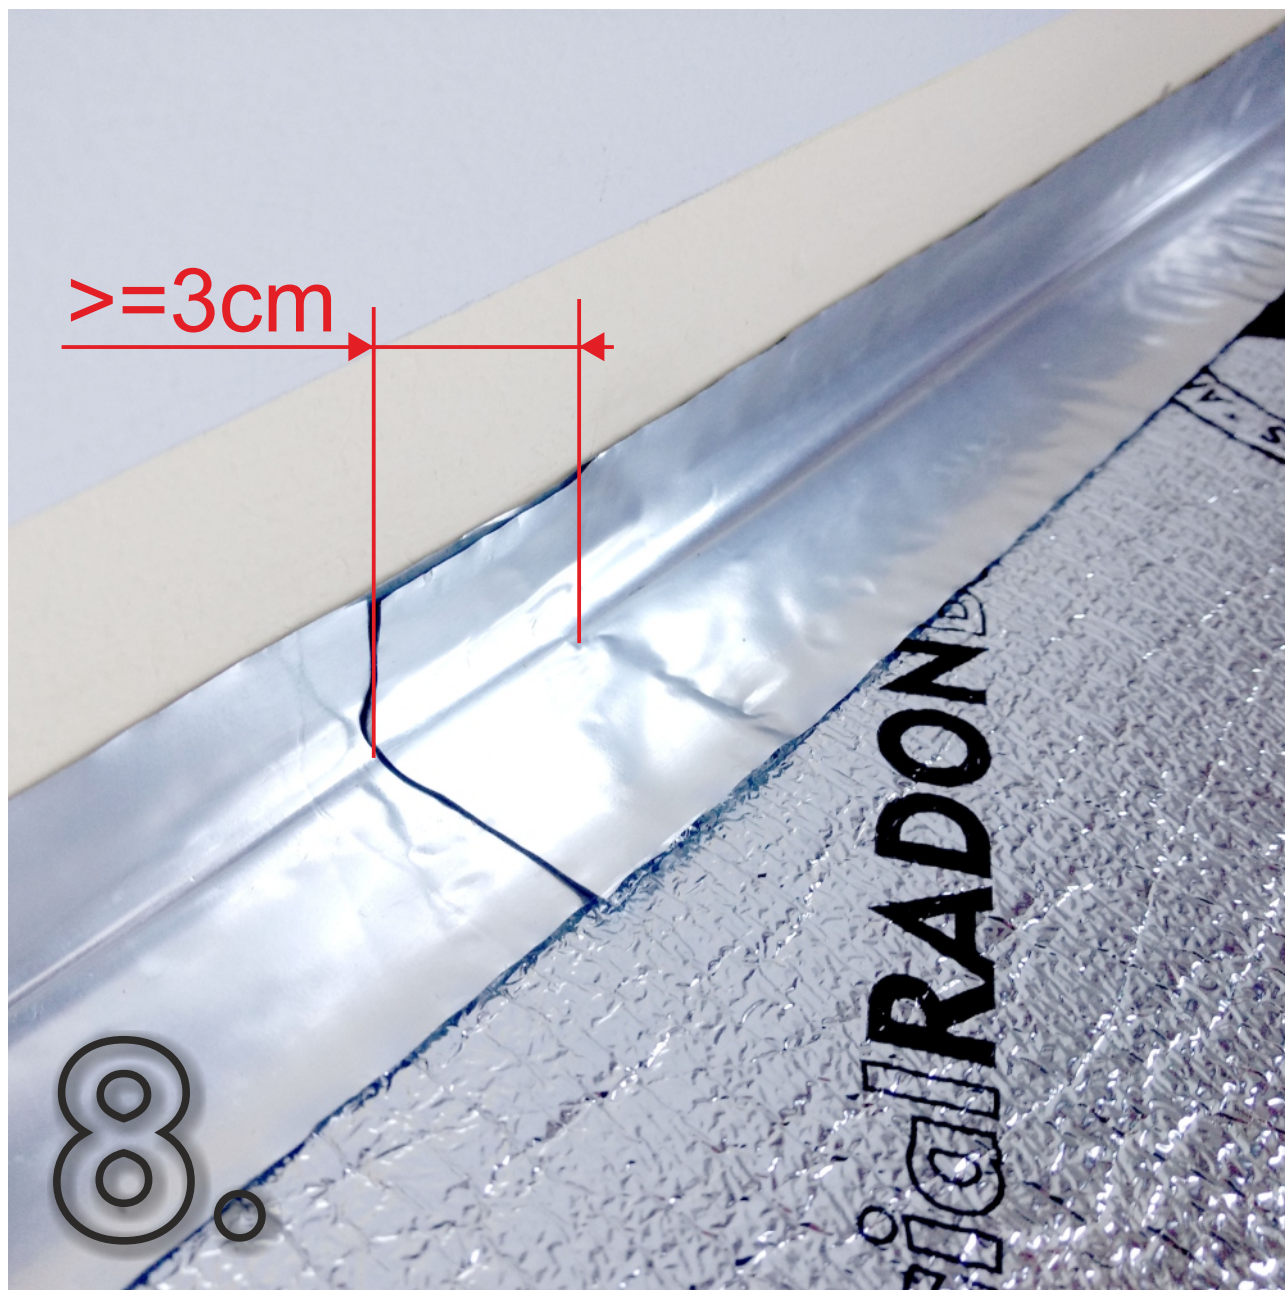


Make an overlap  
of minimum 3 cm  
on each connection  
of butyl tape if  
necessary.

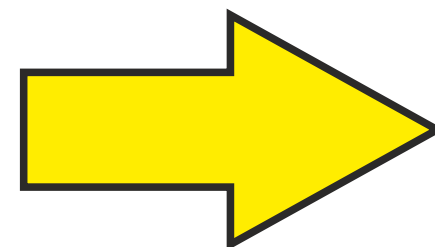









Pay special attention to seal properly each corner of the wall as shown on following pictures:

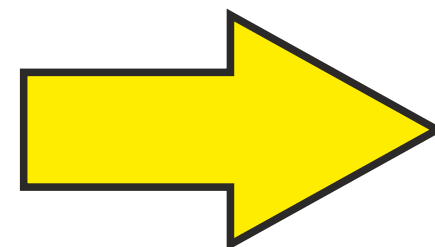




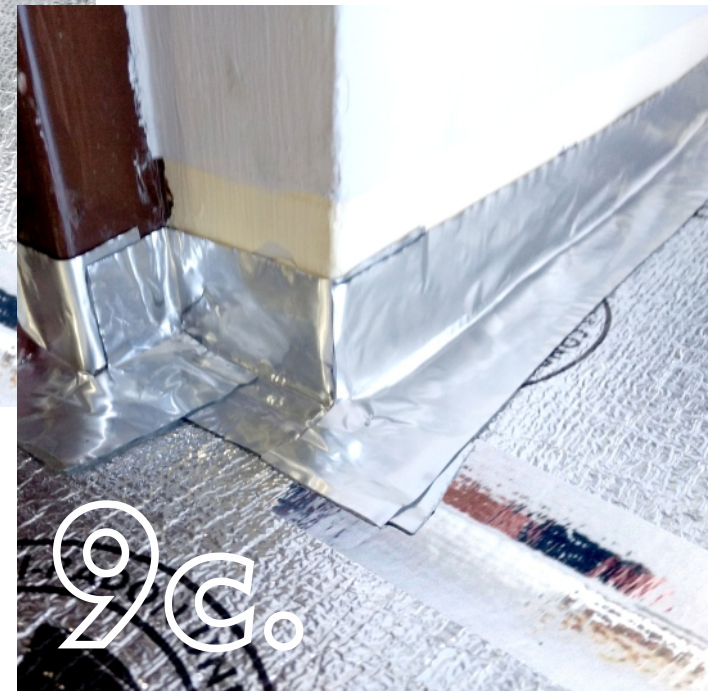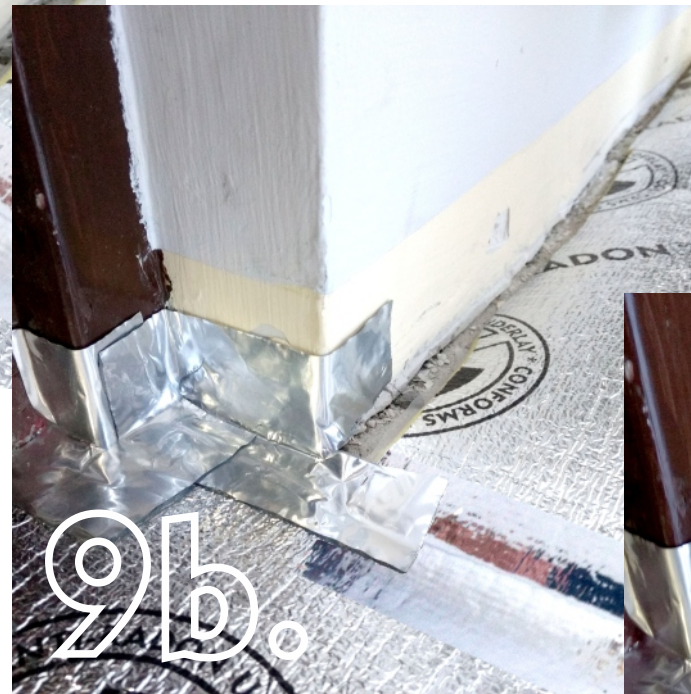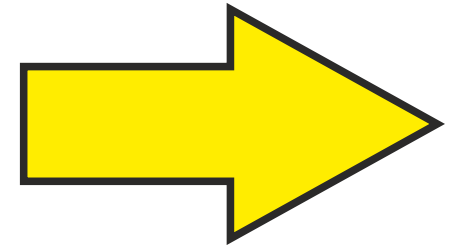



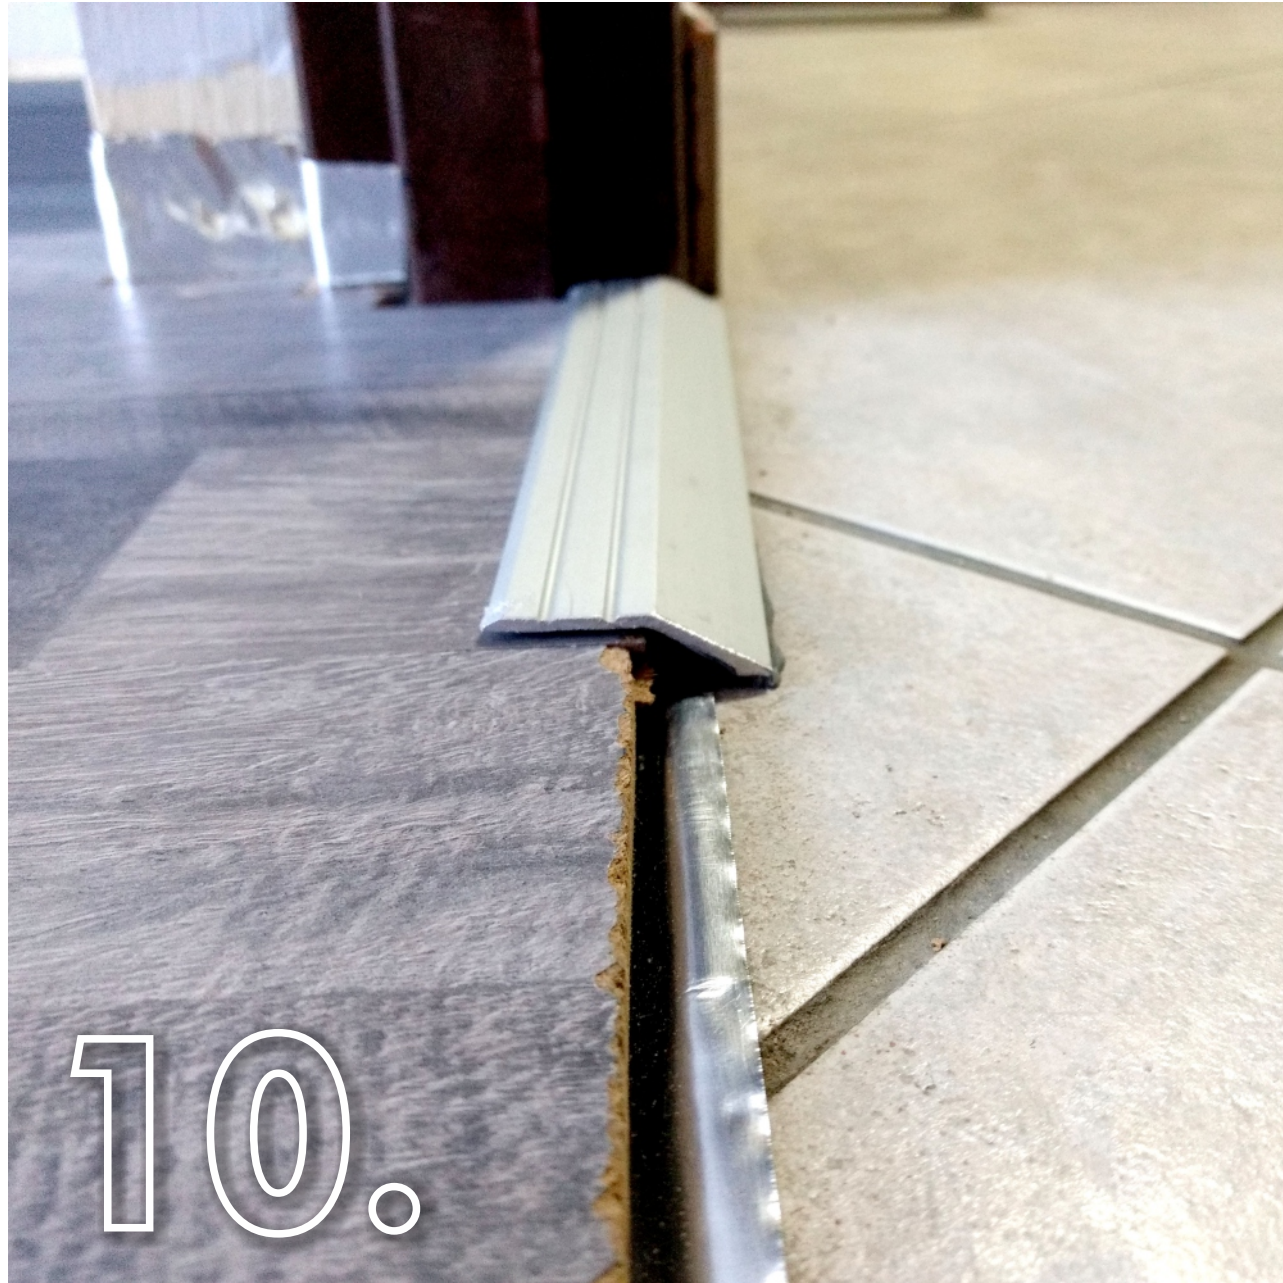

To ensure barrier layer integrity use only glued transition profiles. Avoid any perforation or damage of the Anti-Radon barrier layer.

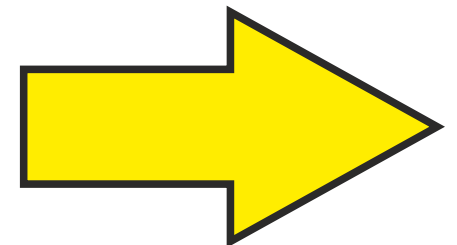



Install skirting boards.



11.

**READY!**